


**NEW IMPROVED SPECIFICATION!**  
with premium  
AZTEC Bar Tape

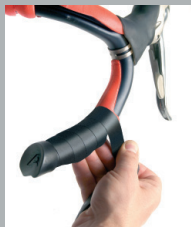

**ULTRA LIGHTWEIGHT**

**Vibe Wrap System  
only 60gms  
End Plugs 22gms**




**AZTEC**

# vibeWrap™

ERGONOMIC BAR-DAMPENING SYSTEM

1


Prepare bar surface by cleaning with alcohol or acetone. Wrap the thin bar prepping tape around the entire surface of the bar to be covered to aid removal in the future.

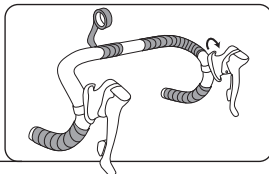

2


Position and mark placement of cushioned pillow pads on bars. Cut to customize if necessary. Remove adhesive backing and adhere each pillow pad to handlebars, holding firmly in place for a few seconds.

**CUSTOM FIT**

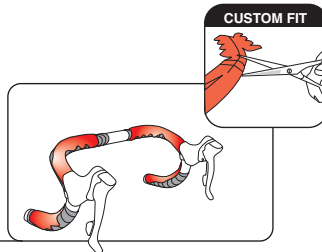

3

Apply adhesive strip along top of bars to anchor the Aztec Bar Wrap. Roll back brake lever hoods and use Bar Wrap to cover entire handlebar. Starting from the end of the handlebar, rotate the Bar Wrap towards the center and up the handlebar.

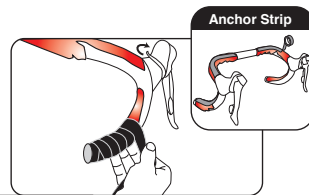

4

A) Roll back the flange on the Aztec end plug and push into open end of bar.  
B) Tape down end of Bar Wrap using black end tape to secure.

